


SPINNING REEL

**REGAL-Z3500T/4000T**

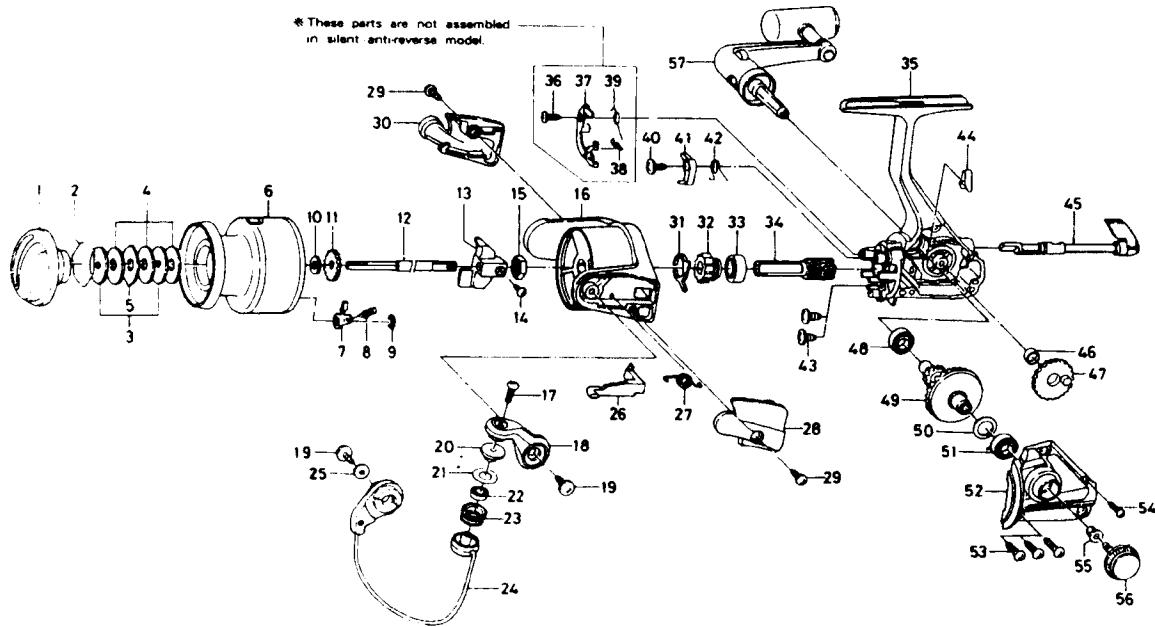

Key No.	Parts No.	Parts Name
2-9	F48-3601	Spool assembly
1	F42-1905	Drag knob
2	F37-3301	Drag washer retainer
3	F09-4901	Key washer
4	E13-6001	Drag washer
5	373-3603	Eared washer
6	F48-3701	Spool assembly
7	B07-5304	Click pawl
8	E40-3101	Click spring
9	320-5901	Click retainer
10	F09-4701	Spool washer
11	E46-2701	Click gear
12	F48-0002	Main shaft
13	F09-1301	Oscillating slider
14	352-1502	Oscillating slider screw
15	340-6602	Rotor nut
16	F42-4204	Rotor assembly
17	B67-9308	Line roller screw
18	F45-2301	Bail arm
19	B84-2102	Sail arm screw
20	F44-6302	Line roller collar
21	F44-6201	Line roller washer
22	F05-5601	Ball bearing A
23	F45-4902	Line roller
24	F48-0301	Bail assembly
25	F40-1001	Bail holder washer
26	E46-2101	Bail trip lever
27	F12-8901	Bail spring
28	F31-4304	Bail spring cover
29	E24-8101	Bail spring cover screw
30	F35-2404	Bail trip cover
31	E46-2001	Anti-reverse pawl spring
32	F31-9801	Anti-reverse ratchet

Key No.	Parts No.	Parts Name
33	L03-6502	Ball bearing B
34	E52-0101	Pinion gear
35	F48-3401	Body assembly
40	E00-7101	Anti-reverse pawl screw
41	E46-1302	Anti-reverse pawl
42	E46-1201	Anti-reverse pawl spring
43	E03-7801	Bearing retainer screw
42	E32-7801	Anti-reverse cam spring
45	F08-5125	Anti-reverse lever
46	F13-1601	Oscillating gear collar
47	F24-6601	Oscillating gear
48	631-6901	Ball bearing C
49	E52-0201	Drive gear
50	373-7805	Drive gear washer
51	631-6901	Ball bearing C
52	F48-3501	Side cover
53	B83-5002	Side cover screw
54	E15-8602	Side cover screw
55	F43-3501	Handle collar
56	B92-5010	Handle lock screw
57	F50-3801	Handle assembly

**Z4000T SPECIAL PARTS**

Key No.	Parts No.	Parts Name
2-9	F48-5001	Spool assembly
6	F48-5101	Spool assembly
16	F42-4304	Rotor assembly
24	F48-0801	Bail assembly
26	E46-3101	Bail trip lever
35	F48-3402	Body assembly
52	F48-3502	Side cover