


EMBLEM-X1500iA / 2000iA

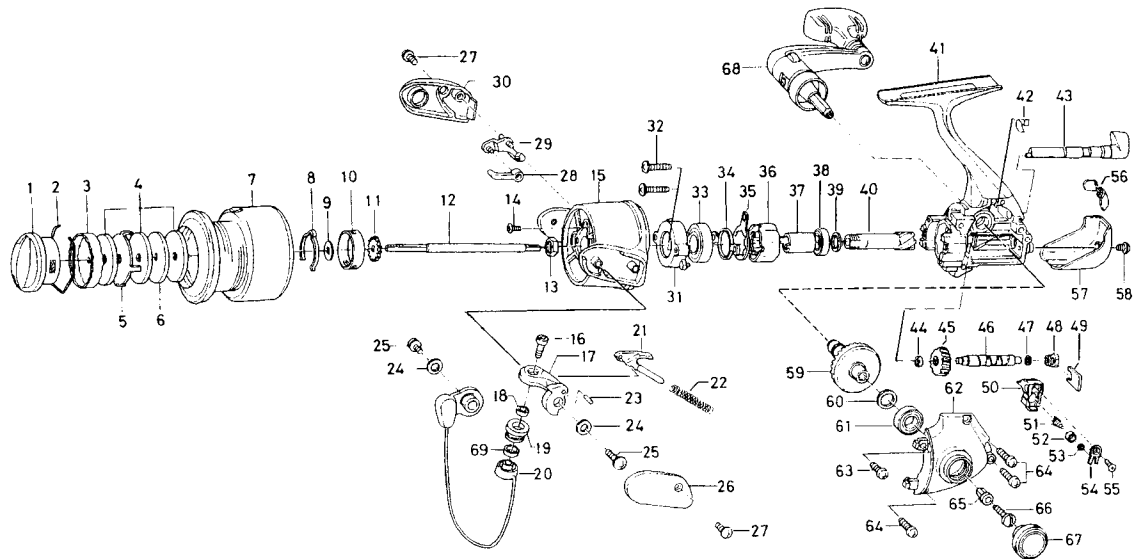

Key No. Parts No.

Parts Name

2-7	F69-0401	SPOOL
1	F63-5601	DRAG KNOB
2	F06-2601	DRAG WASHER RET
3	F69-0201	DRAG KNOB CLICK PLT
4	F69-2301	DRAG WASHER
5	F69-0101	EARER WASHER
6	F69-0001	KEY WASHER
8	F70-4901	SPOOL CLICK LEAF SPRING
9	E39-4001	SPOOL WASHER
10	E12-2303	CLICK LEAF SPRING HOLDER
11	E36-5301	CLICK GEAR
12	F65-2701	MAIN SHAFT
13	341-9203	ROTOR NUT
14	B55-7601	ROTOR NUT LOCK SCREW
15	F63-3707	ROTOR
16	F62-5201	LINE ROLLER SCREW
17	F62-3504	BAIL ARM
18	F62-5101	BALL BEARING A
19	F62-5001	LINE ROLLER
20	F69-0301	BAIL
21	F69-1101	BAIL SPRING SHAFT
22	F74-2401	BAIL SPRING
23	F62-3701	BAIL ARM PIN
24	F63-1801	BAIL HOLDER WASHER
25	351-6101	BAIL ARM SCREW
26	F63-1904	BAIL SPRING COVER
27	352-2501	BAIL SPRING COVER SCREW
28	F62-4601	BAIL TRIP PLT
29	F72-7201	BAIL TRIP LEVER
30	F63-7003	BAIL TRIP COVER
31	F67-5501	BEARING RET
32	E24-7402	BEARING RET SCREW
33	F63-1201	BALL BEARING B
34	F67-5401	BEARING RET B
35	F62-2201	ROLLER CLUTCH RET
36	F62-2001	ROLLER CLUTCH
37	F73-2501	SPACING SLEEVE
38	637-5702	BALL BEARING C

Key No. Parts No.

Parts Name

39	F63-3501	PINION WASHER
40	F65-2501	PINION GEAR
41	F67-4601	BODY
42	F65-1901	A/R CAM SPRING
43	F65-1801	A/R LEVER
44	F65-2201	WORM SHAFT BUSH
45	F65-2101	WORM SHAFT GEAR
46	F65-2001	WORM SHAFT
47	375-4101	WORM SHAFT WASHER
48	F65-2301	WORM SHAFT COLLAR
49	F65-2401	WORM SHAFT RET
50	F65-2601	OSC SLIDER
51	F62-2601	OSC PAWL
52	F62-2701	OSC PAWL BUSH
53	375-0801	OSC PAWL WASHER
54	F62-2901	OSC SLIDER COVER
55	E15-0204	OSC SLIDER COVER SCREW
56	F65-2902	SHIELD PLT
57	B65-3102	REAR COVER
58	E24-8101	REAR COVER SCREW
59	F65-2801	DRIVE GEAR
60	375-8502	DRIVE GEAR WASHER
61	637-5702	BALL BEARING D
62	F65-3005	SIDE COVER
63	E15-7502	SIDE COVER SCREW A
64	E13-0501	SIDE COVER SCREW B
65	F40-4801	HANDLE COLLAR
66	363-8511	HANDLE SCREW
67	F65-3502	HANDLE SCREW CAP
68	F69-2701	HANDLE
69	F70-1801	LINE ROLLER COLLAR

EM-X2000iA

Key No. Parts No.

Parts Name

2-7	F69-4601	SPOOL
20	F69-7701	BAIL