



Key No.	Parts No.	Parts Name
2-7	G11-6801	SPOOL
1	F63-2802	DRAG KNOB
2	F71-0001	DRAG WASHER RET
3	F67-4301	DRAG KNOB CLICK PLT
4	F69-0901	DRAG WASHER
5	F67-6401	EARED WASHER
6	F67-6301	KEY WASHER
8	F70-4901	SPOOL CLICK LEAF SPRING
9	E39-4001	SPOOL WASHER
10	E12-2303	CLICK LEAF SPRING HOLDER
11	E36-5301	CLICK GEAR
12	F65-2701	MAIN SHAFT
13	341-9203	ROTOR NUT
14	B55-7601	ROTOR NUT LOCK SCREW
15	F92-4902	ROTOR
16	F92-1701	LINE ROLLER SCREW
17	F89-2208	BAIL ARM
18	F89-7101	LINE ROLLER WASHER
19	G02-0801	BALL BEARING A
20	F92-1601	LINE ROLLER
21	G04-7601	LINE ROLLER COLLAR
22	F93-7202	BAIL
23	351-7701	BAIL HOLDER SCREW
24	F89-2301	BAIL SPRING SHAFT
25	E31-3901	BAIL SPRING WASHER
26	F89-2401	BAIL SPRING
27	F89-2603	BAIL SPRING COVER
28	351-1801	BAIL HOLDER COVER SCREW
29	F89-3403	BAIL TRIP COVER
30	F62-4701	BAIL TRIP LEVER
31	F62-4601	BAIL TRIP PLT
32	F92-5801	BEARING RET A
33	E24-7402	BEARING RET SCREW
34	F22-6701	BALL BEARING B
35	F92-4801	BEARING RET B
36	F67-5401	BEARING RET C

Key No.	Parts No.	Parts Name
37	F62-2201	ROLLER CLUTCH RET
38	F62-2001	ROLLER CLUTCH
39	375-8509	ROLLER CLUTCH WASHER
40	F73-2501	SPACING SLEEVE
41	637-5702	BALL BEARING C
42	F78-1002	PINION COLLAR
43	F93-5501	PINION GEAR
44	F98-4902	BODY
45	F65-1901	A/R LEVER SPRING
46	F65-1801	A/R LEVER
47	F65-2201	WORM SHAFT BUSH
48	F98-5001	WORM SHAFT
49	375-4101	WORM SHAFT WASHER
50	F65-2301	WORM SHAFT COLLAR
51	F65-2401	WORM SHAFT RET
52	F65-2601	OSC SLIDER
53	F89-1701	OSC PAWL
54	F91-3001	OSC PAWL BUSH
55	375-0801	OSC PAWL WASHER
56	F62-2901	OSC SLIDER COVER
57	E15-0205	OSC SLIDER COVER SCREW
58	F65-2902	SHIELD PLT
59	F65-3102	REAR COVER
60	E24-8101	REAR COVER SCREW
62	F65-2801	DRIVE GEAR
63	375-8500	DRIVE GEAR WASHER
64	637-5702	BALL BEARING D
65	F65-3007	SIDE COVER
66	E15-7502	SIDE COVER SCREW A
67	E13-0501	SIDE COVER SCREW B
68	F40-4801	HANDLE COLLAR
69	363-8511	HANDLE SCREW
70	F65-3503	HANDLE SCREW CAP
71	G12-1601	HANDLE
72	G04-7901	BAIL HOLDER WASHER