


# PROCASTER 103HSD

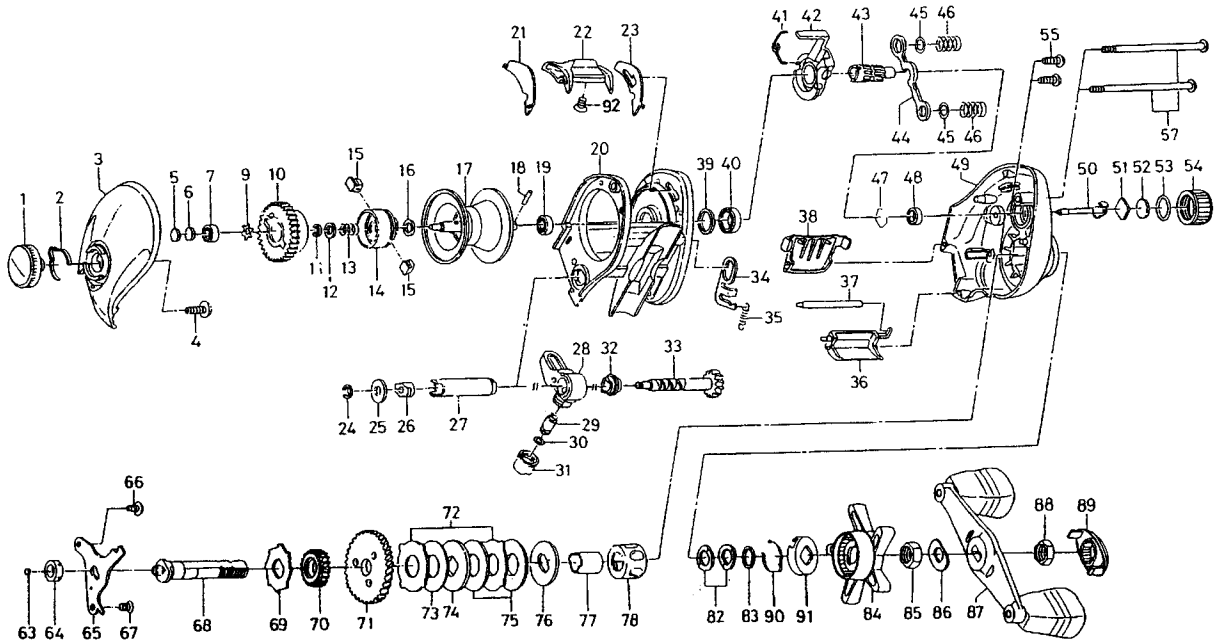

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	F87-6907	BRAKE ADJ KNOB	47	E21-9701	BEARING RET B
2	F05-1701	BRAKE CLICK SPRING	48	F05-5601	BALL BEARING B
3	F87-6208	L/S PLT	49	F87-5812	R/S PLT
4	B84-2102	SET PLT SCREW	50	F80-0501	PINION SHAFT
5	374-9103	SPACER A	51	B17-5402	SPOOL ADJ CAP METAL
6	374-9105	SPACER B	52	B17-5503	SPACER C
7	F40-3701	BUSHING A	53	171-5201	O RING
9	F41-2301	BEARING RET A	54	F40-3002	CAST CONTROL CAP
10	F87-6601	MAGNET HOLDER	55	B67-9304	R/S PLT SCREW A
11-19	Z01-1740	SPOOL	57	F93-8201	R/S PLT SCREW B
20	F87-4002	FRAME	63	F64-7201	DRIVE SHAFT WASHER
21	F87-4301	CLUTCH LEVER PLT A	64	B55-0301	BUSHING B
22	F87-4501	CLUTCH LEVER	65	F87-4701	DRIVE SHAFT RET
23	F87-4201	CLUTCH LEVER PLT B	66	F50-5701	DRIVE SHAFT RET SCREW A
24	320-5901	WORM SHAFT RET	67	F21-1101	DRIVE SHAFT RET SCREW B
25	F65-5501	WORM SHAFT WASHER	68	G25-1201	DRIVE SHAFT
26	B71-5601	WORM SHAFT HOLDER A	69	F76-1701	A/R RATCHET
27	F90-5001	LEVEL WIND GUARD	70	F87-5601	DRIVE GEAR A
28	F87-5101	LINE GUIDE	71	G11-5401	DRIVE GEAR B
29	121-4212	LINE GUIDE PAWL	72	F79-6101	EARED WASHER
30	F95-0200	LINE GUIDE WASHER	73	F79-6201	DRAG WASHER A
31	F40-2803	PAWL CAP	74	F79-6301	KEY WASHER A
32	F90-5101	WORM SHAFT HOLDER B	75	F96-7801	DRAG WASHER B
33	G19-8001	WORM SHAFT	76	B36-0303	KEY WASHER B
34	F42-8801	CLUTCH TRIP PLT	77	G27-6001	GEAR SHAFT COLLAR
35	F87-7901	CLUTCH TRIP PLT SPRING	78	F58-0601	ROLLER CLUTCH
36	F87-5905	FRONT PLT	82	150-8901	DRAG SPRING WASHER
37	F91-5601	STABILIZER BAR	83	373-7807	SPACING SLEEVE
38	F87-6008	PALMING PLT	84	F40-3202	STAR DRAG
39	F79-3401	CLUTCH CAM WASHER	85	B43-3601	DRAG NUT
40	B86-1702	BALL BEARING A	86	150-9001	FRICITION WASHER
41	F87-4801	CLUTCH CAM SPRING	87	G91-4002	HANDLE
42	F87-4401	CLUTCH CAM	88	B43-3601	HANDLE NUT
43	G25-1301	PINION GEAR	89	F40-8401	HANDLE NUT PLT
44	F87-4901	YOKE	90	F03-2401	CLICK LEAF SPRING
45	G00-4401	YOKE WASHER	91	F02-8201	CLICK LEAF SPRING HOLDER
46	F86-4101	YOKE SPRING	92	F21-1103	CLUTCH LEVER SCREW