


# SILVERCAST 170

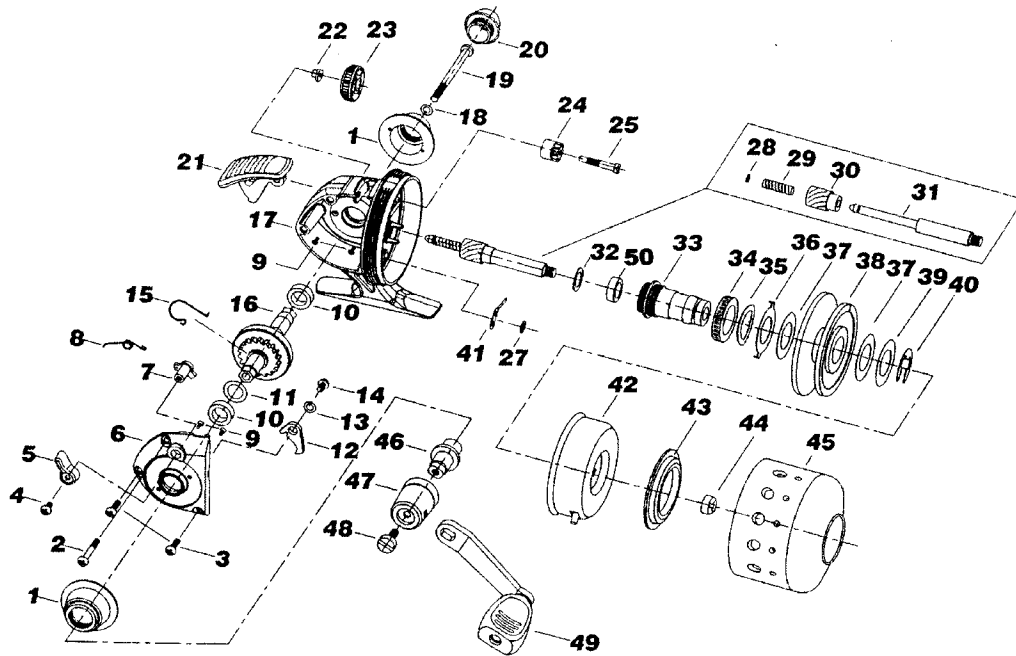

Key No.	Parts No.	Parts Name
1	W31-5004	SIDE RING
2	W31-5102	SIDE COVER SCREW A
3	W31-5201	SIDE COVER SCREW B
4	W31-5301	A/R LEVER SCREW
5	W31-5401	A/R LEVER
6	W31-5611	SIDE COVER
7	W31-5702	A/R CAM
8	W31-5801	A/R CAM SPRING
9	W31-5901	SIDE RING SCREW
10	W31-6002	DRIVE GEAR BUSHING
11	W31-6101	DRIVE GEAR WASHER
12	W31-6203	A/R PAWL
13	W31-6301	A/R PAWL WASHER
14	W31-6401	A/R PAWL SCREW
15	W31-6502	A/R PAWL SPRING
16	W31-6611	DRIVE GEAR
17	W31-6911	BODY
18	W31-7001	HANDLE WASHER
19	W31-7102	HANDLE SCREW B
20	W31-7201	HANDLE SCREW CAP
21	W31-7311	PUSH BUTTON
22	W31-7401	DRAG COLLAR
23	W31-7501	DRAG DIAL
24	W31-7602	DRIVE GEAR A
25	W31-7702	DRIVE GEAR SCREW

Key No.	Parts No.	Parts Name
27	W31-7901	RET
28	W31-8001	SPRING RET
29	W31-8101	MAIN SHAFT SPRING
30	W31-8211	PINION GEAR
31	W31-8402	MAIN SHAFT
32	W31-8501	MAIN SHAFT WASHER
33	W31-8702	SPOOL METAL
34	W31-8803	DRAG PLT
35	W31-8902	DRAG SPRING WASHER
36	W31-9003	EARED WASHER
37	W31-9102	DRAG WASHER
38	W31-9411	SPOOL
39	W31-9502	KEY WASHER
40	W31-9602	SPOOL RET
41	W31-9701	CLICK SPRING
42	W32-0011	ROTOR
43	W32-0202	LINE STOPPER
44	W32-0301	ROTOR NUT
45	W32-0611	FRONT COVER
46	W32-0701	HANDLE METAL
47	W32-0801	HANDLE STAND
48	W32-0901	HANDLE SCREW A
49	W32-1011	HANDLE
50	W31-6012	BALL BEARING