



ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	8888992	DRAG KNOB ASSEMBLY	27	8889023	PINION COLLAR
2	8888993	SPOOL ASSEMBLY	28	8889024	BALL BEARING
■	8888994		29	8889025	PINION
3	8888995	SPOOL ADJUST WASHER	30	8889026	BEARING SCREW
4	8888996	CLICK GEAR	31	8889027	KICK PLATE
5	8888997	MAIN SHAFT	32	8889028	KICK PLATE SCREW
6	8888998	ROTOR NUT	33	8889029	BODY
7	8888999	ROTOR NUT LOCK WASHER	■	8889030	
8	8889000	ROTOR	34	8889052	ANTI-REVERSE PAWL
■	8889001		35	8889031	ANTI-REVERSE PAWL SPRING
9	8889002	KICK LEVER SPRING	36	8889032	ANTI-REVERSE PAWL SCREW
10	8889003	KICK LEVER	37	8889033	BALL BEARING
11	8889004	KICK LEVER COVER	38	8889034	DRIVE GEAR
■	8889005		39	8889035	ANTI-REVERSE PAWL ADJUST
12	8889006	KICK LEVER COVER SCREW	40	8889036	DRIVE GEAR ADJUST WASHER
13	8889007	BAIL LEVER SPRING	41	8889037	BALL BEARING
14	8889008	BAIL LEVER SPRING WASHER	42	8889038	BODY COVER
15	8889009	BAIL COIL SPRING	■	8889039	
16	8889010	BAIL LEVER SPRING PLATE	43	8889040	BODY COVER SCREW
17	8889011	BAIL SPRING COVER	44	8889041	BODY COVER WASHER
■	8889012		45	8889042	OSCILLATING GEAR
18	8889013	BAIL SPRING COVER SCREW	46	8889043	OSCILLATING GEAR SCREW
19	8889014	BAIL ASSEMBLY	47	8889044	OSCILLATING SLIDER
■	8889015		48	8889045	OSCILLATING SLIDER SCREW
20	8889016	LINE ROLLER BALL BEARING	49	8889046	ANTI-REVERSE LEVER
21	8889017	LINE ROLLER ADJUST WASHER	50	8889047	HANDLE ASSEMBLY
22	8889018	ARM LEVER	51	8889048	HANDLE SCREW WASHER
23	8889019	ARM LEVER SCREW	52	8889049	HANDLE CAP SCREW
24	8889020	BAIL SCREW	53	8889050	ROTOR NUT LOCK SCREW
25	8889021	BAIL HOLDER SCREW	54	8889051	KICK LEVER COVER SCREW
26	8889022	RATCHET			■ = RT80SS ONLY