



1	889-0010	Drag Knob Assembly	12	889-0013	Click Washer Kit	22	859-2000	Internal Ball Trip Lever	33	889-0020	Anti-Reverse Switch
2	889-0011	Spool, Aluminum	13	889-0014	Spool Hub Assembly	23	889-4300	Anti-Reverse Pawl	34	889-0021	Gear Set
3	889-0012	Spool, Graphite	13A	889-0042	Drag Washers	24	888-9408	Rotor	35	889-0022	Oscillation Gear Kit
4	888-9359	Bail Wire Assembly	14	850-5900	Rotor Nut Retainer Screw	25	861-1600	Spacer Washer	36	897-6500	Drive Gear Support Bearing
5	863-2000	Bail Screw	15	850-3900	Rotor Nut Retainer	26	888-9411	Anti-Reverse Spring Assy.	37	897-6200	Ball Bearing
6	866-7700	Line Roller Washer	16	842-9900	Rotor Nut	27	850-5300	Anti-Reverse On-Off Spring	38	889-0023	Body Cover
7	888-9402	Line Roller Bail Bearing	17	889-0015	Main Shaft	28	893-4000	Anti-Reverse Actuation Race	39	888-9412	Body Screws
8	866-6700	Ceramic Line Roller	18	888-9405	Rotor Cover & Pinion Screw	29	889-0017	Pinion Bearing Retainer	40	888-9414	Handle Assembly
9	867-6800	Line Roller Insert	19	889-0016	Rotor Cover & Pinion Screw	30	889-0018	Anti-Reverse Stem			
10	888-9403	Bail Arm	20	850-4800	Bail Trip Plunger	31	889-0019	Body			
11	850-3800	Bail Arm Screw	21	850-4600	Bail Spring	32	888-9425	Handle Nut			