



797

24

1	Drag Knob Assembly	888-9993	22	Line Control Spring	880-2900	44	Pinion Sleeve	880-5400
2	Retaining Ring	859-3300	23	Line Control Rocker	888-9998	45	Pinion	880-5300
3	Double "D" Washer	859-3100	24	Hex Nut Rotor	842-9900	46	Pinion Ball Bearing	850-5500
4	Drag Washer	859-3200	25	Rotor Retainer Screw	850-5900	47	Pinion Bearing Retainer	880-3400
5	Eared Washer	859-3000	26	Rotor Hex Nut Retainer	850-3900	48	Bearing Retainer Screw	859-6000
6	Spool, Aluminum	888-9994	27	Oscillation Shaft Assembly	888-9168	49	Drive Gear	880-4500
7	Spool, Graphite	888-9181	28	Plastic Bail	880-6600	51	Shim Washer	850-5600
8	Gasket Ring	800-0715	29	Bail Weight	888-9999	52	Side Cover Assembly	889-0005
9	Spool Core Assembly	888-9193	30	Balancing Weight Screw	888-9192	53	Side Cover Screw (Black)	859-5700
10	Spindle Spool	880-4300	31	Bail Spring Pin	880-7500	54	Anti-Reverse Switch	889-0006
11	Base Drag Washer	859-3900	32	Bail Spring	866-4100	55	Anti-Reverse Shaft	880-3300
12	Line Guide	888-9995	33	Bail Pin Sheath	880-7300	56	Anti-Reverse Spring	850-5300
13	Plastic Bushing	880-7800	34	Screw (Black)	859-6000	57	Body Assembly	889-0007
14	Line Guide Washer	866-7700	35	Bail Trip Rocker	880-7200	58	Oscillation Gears	888-9169
15	Bail Arm Screw	888-9190	36	Anti-Reverse Friction Spring	888-9189	59	Oscillation Shaft Screw	859-0700
16	Bail Trip Cover Plate	888-9996	38	Rotor Weight	889-0001	60	Oscillation Slide	880-5000
17	Bail Trip Actuation Screw	880-8000	39	Rotor	889-0002	61	Oscillation Slide Bar	880-5100
18	Bail Trip Lever (Sz 30)	880-7100	40	Rotor Cover Plate	889-0003	64	Anti-Reverse Pawl Assembly	889-0008
19	Bail Trip Spring	880-7600	41	Cap	889-0004	65	Brass Sleeve	880-9700
20	Bail Arm	888-9997	42	Ball Bearing	859-2400	66	Drive Bearing Retainer	888-9243
21	Line Guide Screw (Black)	842-9300	43	Anti-Reverse Switch Sleeve	890-5500	67	Crank Handle Assembly	889-0009

SCS30