



PARTS LIST

NO.	DESCRIPTION	PART NO.	NO.	DESCRIPTION	PART NO.
1	DRA GKNOB	1 08 06 60	32	SL ENT SPRING	1 08 06 91
2	RETAINER RING	1 08 06 61	33	SL ENT RING	1 08 06 92
3	WASHER	1 08 06 62	34	ROTOR WASHER	1 08 06 93
4	BEADED WASHER	1 08 06 63	35	BALL BEARING	1 08 06 94
5	DRA G WASHER	1 08 06 64	36	PI NION GEAR	1 08 06 95
6	SPCO L COMPLETE(2-9)	1 08 06 65	37	BALL BEARING SC	1 08 06 96
7	CL ICK GEAR	1 08 06 66	38	SC	1 08 06 97
8	CL ICK SPRING	1 08 06 67	39	ANTI-REVERSE PAWL	1 08 06 98
9	"E"RE TAINER	1 08 06 68	40	BODY	1 08 06 99
10	CL ICK WASHER	1 08 06 69	41	HANDLE SCREW CAP	1 08 07 00
11	SPCO L CL ICK GEAR	1 08 06 70	42	HANDLE SCREW CAP WASHER	1 08 07 01
12	MA I N SHAF T	1 08 06 71	43	ANTI-REVERSE LEVER SPRING	1 08 07 02
13	ROTOR NUT	1 08 06 72	44	ANTI-REVERSE LEVER	1 08 07 03
14	ROTOR NUT SCREW	1 08 06 73	45	ANTI-REVERSE LEVER BUSHING	1 08 07 04
15	ROTOR	1 08 06 74	46	ANTI-REVERSE LEVER SCREW	1 08 07 05
16	BAIL LEVER	1 08 06 75	47	BUSHING	1 08 07 06
17	K ICK LEVER COVER	1 08 06 76	48	DRIVE GEAR	1 08 07 07
18	K ICK LEVER COVER SC	1 08 06 77	49	WASHER	1 08 07 08
19	BAIL SCREW	1 08 06 78	50	BODY COVER BALL BEARING	1 08 07 09
20	BAIL ARM	1 08 06 79	51	BODY COVER	1 08 07 10
21	SCRE W	1 08 06 80	52	OSC ILL ATING GEAR	1 08 07 11
22	LINE ROLLER WASHER	1 08 06 81	53	OSC ILL ATING GEAR BUSHING	1 08 07 12
23	LINE ROLLER	1 08 06 82	54	SCRE W	1 08 07 13
24	BUSHING	1 08 06 83	55	SL I D E R	1 08 07 14
25	BAIL ASSY	1 08 06 84	56	SC	1 08 07 15
26	BAIL HOLDER	1 08 06 85	57	BODY COVER SC	1 08 07 16
27	K ICK LEVER	1 08 06 86	58	HANDLE ASSY	1 08 07 17
28	SPRING	1 08 06 87	59	ANTI-REVERSE BUTTON	1 08 07 18
29	SL I D E R	1 08 06 88	60	ANTI-REVERSE BUTTON RETAINER	1 08 07 19
30	BAIL ARM COVER	1 08 06 89	61	SC	1 08 07 20
31	SIL ENT BUSHING	1 08 06 90	62	REAR COVER	1 08 07 21

MITCHELL ESPRIT COMBO REEL