


EXPLODED PARTS VIEW BANTAM®-100XSG

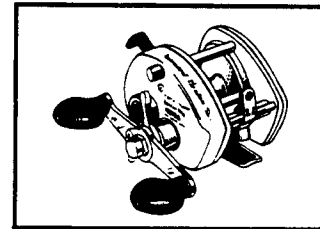

TO ORDER
Original Key # and Original Code # are for cross-reference only. Please order parts using the Part # column and the prefix "BNT" which indicates the Bantam reel series

PARTS LIST

PART #	ORIGINAL KEY #	ORIGINAL CODE #	DESCRIPTION	PART #	ORIGINAL KEY #	ORIGINAL CODE #	DESCRIPTION
1.	1.	7-0014 3010	Handle Nut Plate Screw	27.	27.	7-1821 1000	Retractor Spring (A)
2.	2.	7-2123 0610	Handle Nut	28.	28.	7-1824 0610	Anti-Reverse
3.	3.	7-2124 0610	Handle Nut Plate				Pawl Assembly
4.	4.	7-0013 4020	Drive Shaft Screw	29.	29.	7-1822 0610	Retractor Spring (B)
116.	5.	6-2129 0610	Handle Assembly	144.	30.	6-1809 0614	Set Plate Assembly
6.	6.	7-2116 0610	Friction Washer (A)	31.	31.	7-1517 0610	Spool Shaft Bearing
7.	7.	6-2119 0610	Star Drag Assembly	32.	32.	7-1516 0610	Bearing Retainer
8.	8.	7-2010 0610	Cast Control Cap	368.	33.	7-1701 0605	Spool Assembly
9.	9.	7-2060 0610	Spacer (A)	34S.	34.	7-1705 0610	Brake Collar (Small)
10.	10.	7-2051 0610	Cast Control Bushing	34L.	34.		Brake Collar (Large)
11.	11.	7-0013 0050	Set Plate Screw	35.	35.	7-1515 0610	Spacer (B)
369.	12.	6-2019 0614	Right Side Plate Assembly	36.	36.	7-0012 0010	Right Stabilizer Bar Screw
			Bushing (B)	37.	37.	6-1509 0610	Frame Assembly
13.	13.	7-2113 0610	Friction Washer (B)	38.	38.	6-1609 0610	Worm Shaft Assembly
14.	14.	7-2111 0610	Drag Spring Washer	39.	39.	7-1605 0610	Worm Bearing (A)
15.	15.	7-2112 0610	Friction Washer (C)	40.	40.	7-1606 0610	Level Wind Guard
16.	16.	7-2110 0610	Key Washer	41.	41.	6-1619 0610	Line Guide Assembly
17.	17.	7-2108 0610	Drag Washer	42.	42.	7-1611 0610	Line Guide Pawl
18.	18.	7-2107 0610	Drive Gear	60.	43.	7-1431 0610	Line Guide Pawl Washer (Optional)
19.	19.	7-2106 0610	Drive Shaft Washer (B)	43.	44.	7-1612 0610	Pawl Cap
20.	20.	7-2105 0610	Anti-Reverse Ratchet	44.	45.	7-1607 0610	Stabilizer Bar
21.	21.	7-2103 0610	Drive Shaft	45.	46.	7-1601 0610	Worm Bearing (B)
22.	22.	7-2102 0610	Pinion Gear Assembly	46.	47.	7-1614 0610	Level Wind Retainer Screw (Left hand thread)
23.	23.	6-1729 0610	Yoke Spring	47.	48.	7-1401 0610	Left Side Plate
24.	24.	7-1817 0610	Yoke	11.	49.	7-0013 0050	Left Side Plate Screw
25.	25.	7-1816 0610	Drive Shaft Washer (A)	49.	50.	7-0013 0030	Left Stabilizer Bar Screw
26.	26.	7-2101 0610					