


## BANTAM®-10XSG

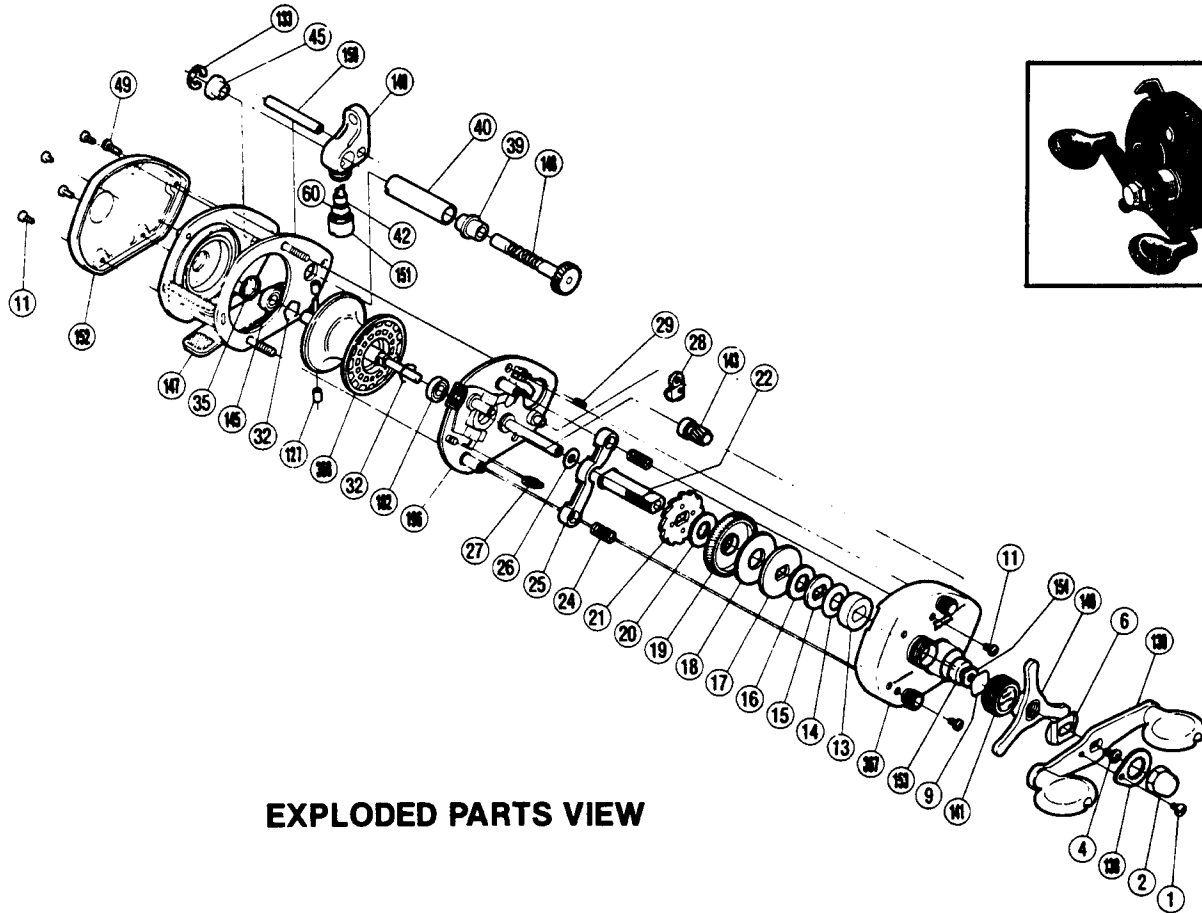

**EXPLODED PARTS VIEW**

**TO ORDER**

Original Key # and Original Code # are for cross-reference only. Please order parts using the Part # column and the prefix "BNT" which indicates the Bantam reel series.

### PARTS LIST

PART #	ORIGINAL KEY #	ORIGINAL CODE #	DESCRIPTION	PART #	ORIGINAL KEY #	ORIGINAL CODE #	DESCRIPTION
1.	1.	7-0014 3010	Handle Nut Plate Screw	26.	26.	7-2101 0610	Drive Shaft Washer (A)
2.	2.	7-2123 0610	Handle Nut	27.	27.	7-1821 1000	Retractor Spring (A)
138.	3.	7-2124 0600	Handle Nut Plate	143.	28.	6-1729 0600	Pinion Gear Assembly
4.	4.	7-0013 4050	Drive Shaft Screw	28.	29.	7-1824 0610	Anti-Reverse Pawl Assembly
139.	5.	6-2129 0600	Handle Assembly	29.	30.	7-1822 0610	Retractor Spring (B)
6.	6.	7-2116 0610	Friction Washer (A)	196.	31.	6-1809 0605	Set Plate Assembly
140.	7.	6-2119 0600	Star Drag Assembly	182.	32.	7-1845 0600	Bushing (C)
141.	8.	7-2010 0600	Cast Control Cap	32.	33.	7-1516 0610	Bearing Retainer
9.	9.	7-2060 0610	Spacer (A)	368.	34.	7-1701 0605	Spool Assembly
154.	10.	7-2052 0600	Felt Washer	34L.	35.	7-1705 0610	Brake Collar (Large)
153.	11.	7-2051 0600	Bushing (A)	145.	36.	7-1517 0600	Bushing (D)
11.	12.	7-0013 0050	Set Plate Screw	35.	37.	7-1515 0610	Spacer (B)
367.	13.	6-2019 0605	Right Side Plate Assembly	147.	38.	6-1509 0600	Frame Assembly
13.	14.	7-2113 0610	Bushing (B)	148.	39.	6-1609 0600	Worm Shaft Assembly
14.	15.	7-2111 0610	Friction Washer (B)	39.	40.	7-1605 0610	Worm Bearing (A)
15.	16.	7-2112 0610	Drag Spring Washer	40.	41.	<del>7-1606 0610</del>	Level Wind Guard
16.	17.	7-2110 0610	Friction Washer (C)	149.	42.	7-1619 0600	Line Guide Assembly
17.	18.	7-2108 0610	Key Washer	42.	43.	7-1611 0610	Line Guide Pawl
18.	19.	7-2107 0610	Drag Washer	60.	44.	7-1431 0610	Line Guide Pawl Washer
19.	20.	7-2106 0610	Drive Gear	151.	45.	7-1612 0600	Pawl Cap
20.	21.	7-2105 0610	Drive Shaft Washer (B)	150.	46.	7-1607 0600	Stabilizer Bar
21.	22.	7-2103 0610	Anti-Reverse Ratchet	45.	47.	7-1601 0610	Worm Bearing (B)
22.	23.	7-2102 0610	Drive Shaft	133.	48.	7-1618 0600	Worm Shaft Retainer
24.	24.	7-1817 0610	Yoke Spring	152.	49.	7-1401 0600	Left Side Plate
25.	25.	7-1816 0610	Yoke	49.	50.	7-0013 0030	Left Stabilizer Bar Screw
				34S.	35.		Brake Collar (Small)