



SHIMANO

1987 REPAIR MANUAL

Shimano American Corporation, One Shimano Drive
Irvine, CA 92718

TO ORDER:

This reel belongs to the "Bantam" series.
Please order parts using the abbreviation
"BNT" and the part number.

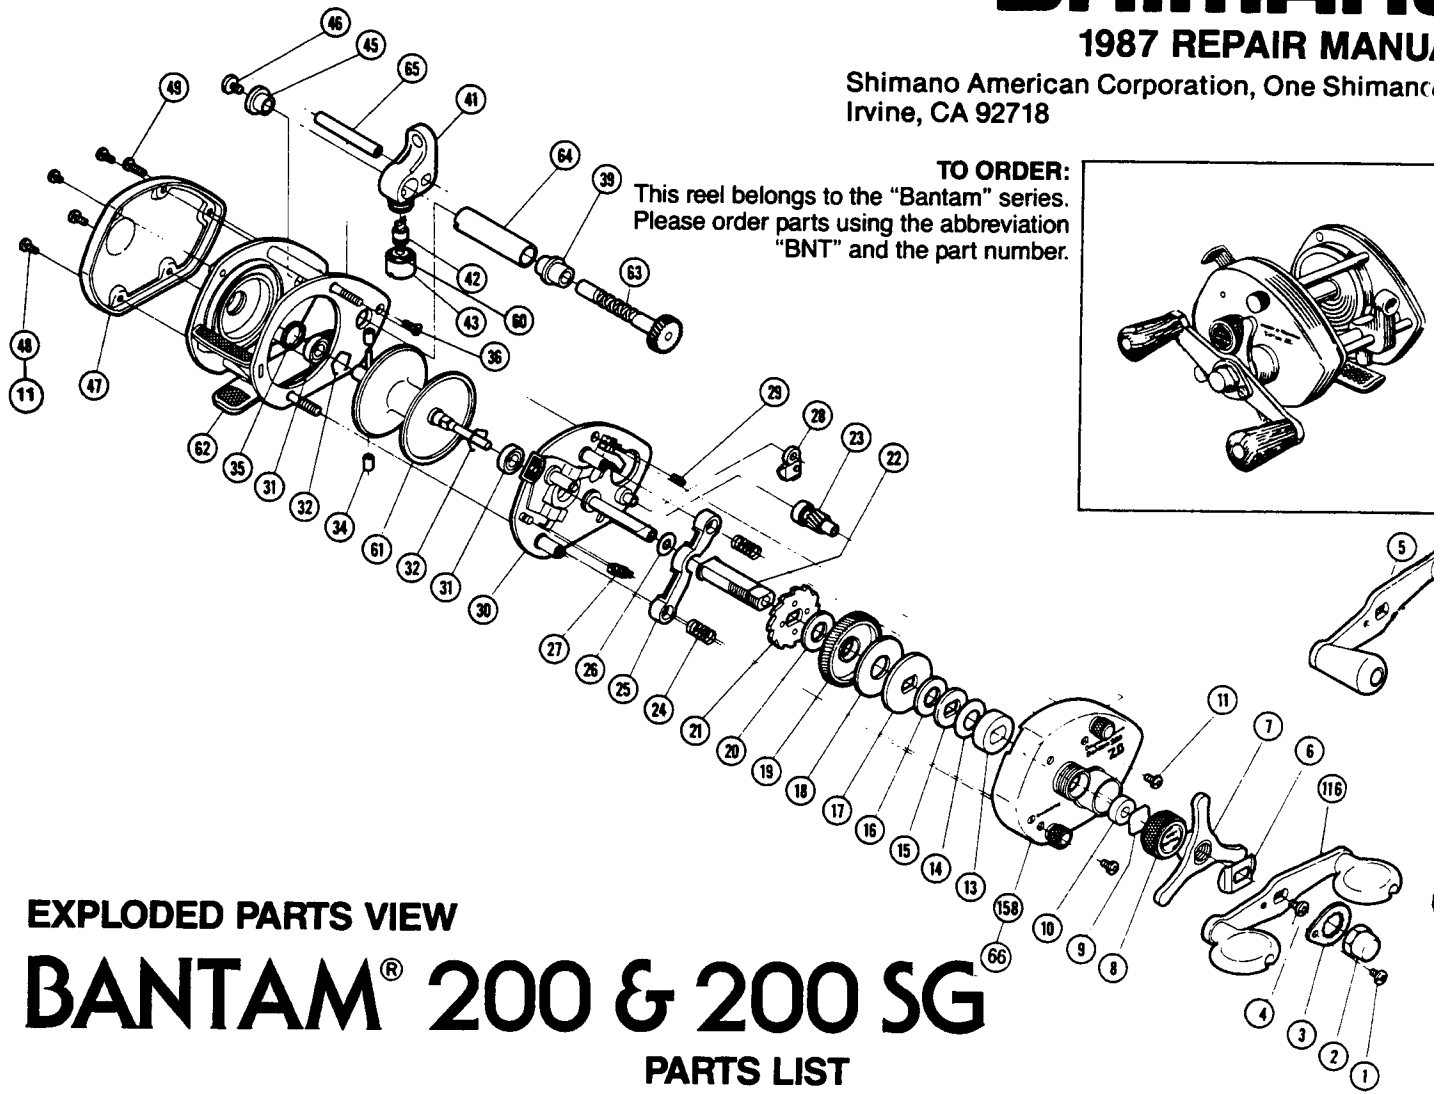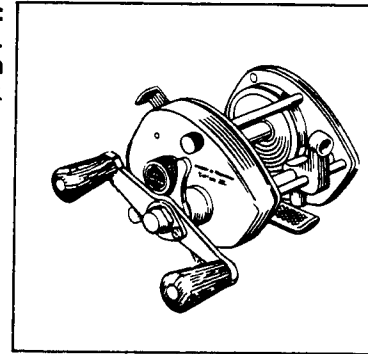

EXPLODED PARTS VIEW

BANTAM® 200 & 200 SG

PARTS LIST

PART #	DESCRIPTION	PART #	DESCRIPTION	PART #	DESCRIPTION
1.	Handle Nut Lock Screw	20.	Base Drag Washer	42.	Level Wind Pawl
2.	Handle Nut	21.	Anti Reverse Ratchet	43.	Pawl Cap
3.	Handle Nut Lock Plate	22.	Drive Shaft	45.	Level Wind Bearing (Left)
4.	Drive Shaft Retainer Screw	23.	Pinion Gear	46.	Level Wind Retainer Screw (Left Hand Thread)
5.	Handle	24.	Pinion Yoke Spring	47.	Left Side Plate
6.	Friction Washer	25.	Pinion Yoke	48.	Left Side Plate Screw
7.	Drag Tri-Star	26.	Drive Shaft Shim	49.	Left Stabilizer Bar Screw
8.	Cast Control Cap	27.	Retractor Spring #1	60.	Line Guide Pawl Spacer *
9.	Cast Control Spacer	28.	Anti Reverse Dog	61.	Spool
10.	Cast Control Bushing	29.	Retractor Spring #2	62.	Frame Assembly
11.	Side Plate Screw	30.	Set Plate	63.	Level Wind Gear
13.	Drive Shaft Bearing	31.	Spool Shaft Bearing	64.	Level Wind Guard
14.	Drag Spring Washer	32.	Bearing Lock	65.	Line Guide Stabilizer Bar
15.	"D" Washer	34S.	Centrifugal Brake Weights (Small)	66.	Right Side Plate
16.	Drag Spacer	34L.	Centrifugal Brake Weights (Large)	116.	Handle (200 SG)
17.	Pressure Plate	35.	Left Bearing Spacer	158.	Right Side Plate (200 SG)
18.	Drag Washer	36.	Right Stabilizer Bar Screw		
19.	Drive Gear	39.	Level Wind Bearing (Right)		
		41.	Line Guide		

Prices and specifications subject to change without notice.