



# SHIMANO®

## 1987 REPAIR MANUAL

Shimano American Corporation, One Shimano Dr.  
Irvine, CA 92718

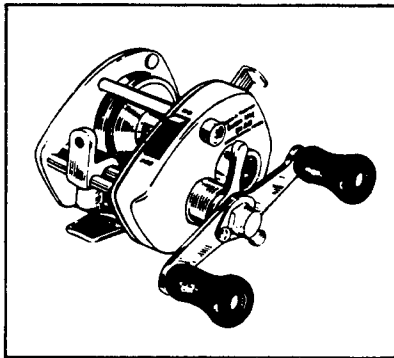

**TO ORDER:**  
This reel belongs to the "Bantam" series.  
Please order parts using the abbreviation  
"BNT" and the part number.

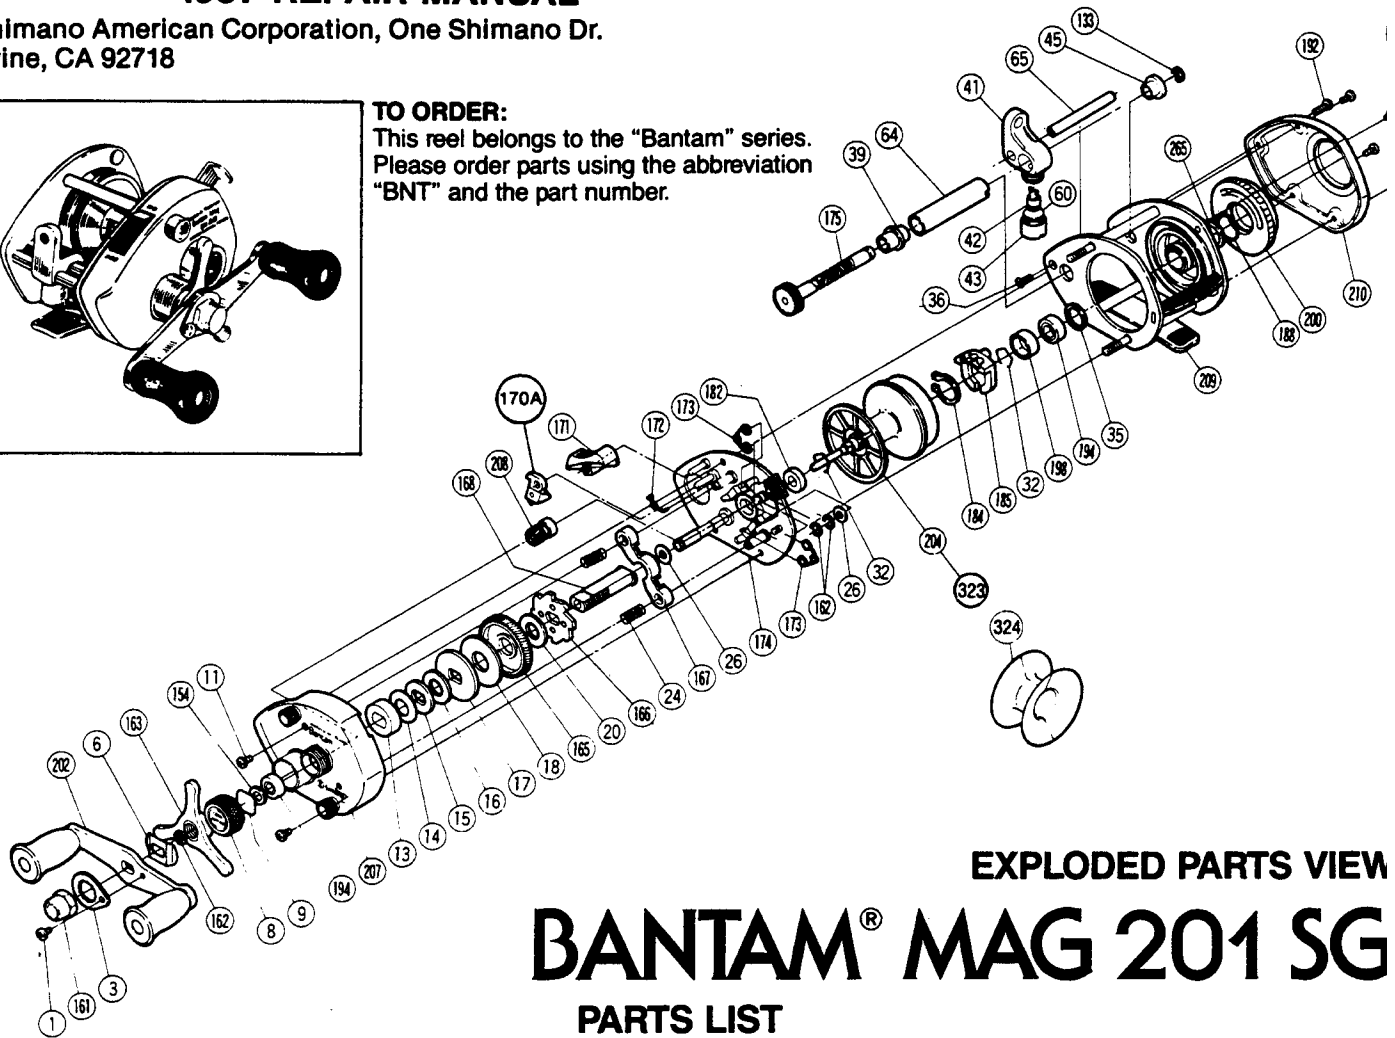

**EXPLODED PARTS VIEW**

# BANTAM® MAG 201 SG

## PARTS LIST

PART #	DESCRIPTION
1.	Handle Nut Lock Screw
3.	Handle Nut Lock Plate
6.	Friction Washer
8.	Cast Control Cap
9.	Cast Control Spacer
11.	Side Plate Screw
13.	Drive Shaft Bearing
14.	Drag Spring Washer
15.	"D" Washer
16.	Drag Spacer
17.	Pressure Plate
18.	Drag Washer
20.	Base Drag Washer
24.	Pinion Yoke Spring
26.	Drive Shaft Shim
32.	Bearing Lock
35.	Bearing Spacer
36.	Stabilizer Bar Screw
39.	Level Wind Bearing

PART #	DESCRIPTION
41.	Line Guide
42.	Level Wind Pawl
43.	Pawl Cap
45.	Level Wind Bearing
60.	Pawl Shim
64.	Level Wind Guard
65.	Stabilizer Bar
133.	Level Wind Gear Lock
154.	Felt Oil Retainer
161.	Handle Nut
162.	"C" Lock
163.	Drag Tri-Star
165.	Drive Gear
166.	Anti Reverse Ratchet
167.	Pinion Yoke
168.	Drive Shaft
170A.	Anti Reverse Dog
171.	Anti Reverse Switch
172.	Switch Spring
173.	Retractor Spring

PART #	DESCRIPTION
174.	Set Plate
175.	Level Wind Gear
182.	Spool Shaft Bushing
184.	Magnet Retainer Lock
185.	Magnet Retainer
188.	O Ring
191.	Side Plate Screw
192.	Stabilizer Bar Screw
194.	Spool Shaft Bearing
198.	Bearing Spacer
200.	Magnetic Control Dial
202.	Handle
204.	Spool (Old Type)
207.	Left Side Plate
208.	Pinion Gear
209.	Frame
210.	Right Side Plate
265.	Thrust Washer
323.	Spool (convertible)
324.	V-Spool Converter*

Prices and specifications subject to change without notice.