
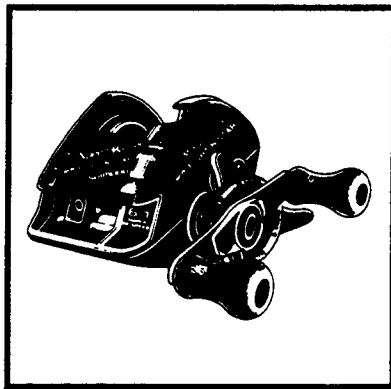


SHIMANO

1988 REPAIR MANUAL

Shimano American Corporation, One Shimano Ct
Irvine, CA 92714

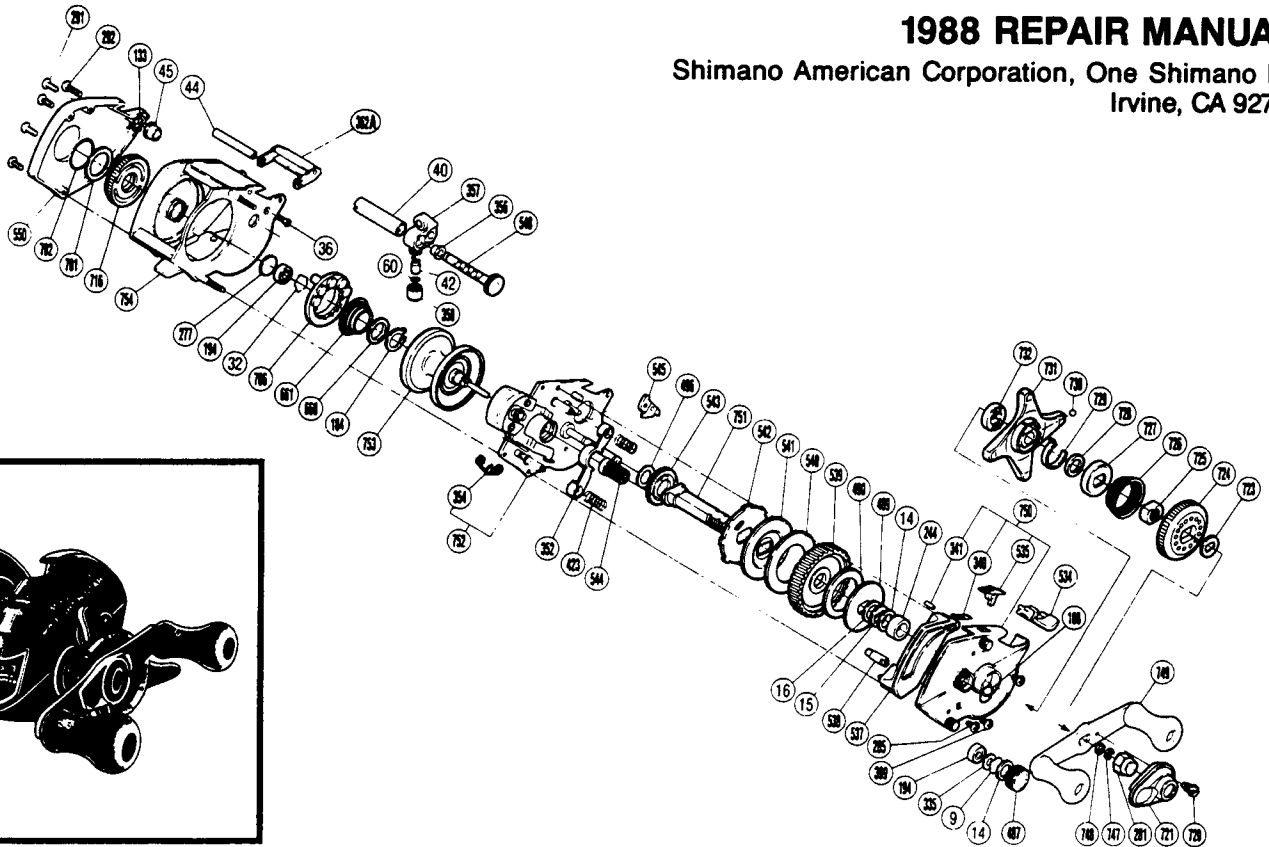

EXPLODED PARTS VIEW
Bantam *Magnumlite*
SpeedMaster 2200FS

PARTS LIST

PART #	DESCRIPTION	PART #	DESCRIPTION	PART #	DESCRIPTION
BNT 0009	Spacer (A)	BNT 0356	Worm Bearing "A"	BNT 0701	Thrust Washer Spacer (Optional)
BNT 0014	Friction Washer (B)	BNT 0357	Line Guide (Assembly)	BNT 0702	Dial O Ring
BNT 0015	Drag Spring Washer	BNT 0358	Pawl Cap	BNT 0706	Magnet Retainer
BNT 0016	Friction Washer (C)	BNT 0362A	Level Wind Protector	BNT 0716	Magnet Control Dial
BNT 0032	Bearing Retainer	BNT 0399	Retractor Guide Screw (Large Head)	BNT 0720	Handle Nut Plate Screw
BNT 0036	Stabilizer Bar Screw (A) (S)	BNT 0423	Yoke Spring	BNT 0721	Handle Nut Plate
BNT 0040	Level Wind Guard	BNT 0487	Cast Control Cap	BNT 0723	Friction Washer "A"
BNT 0042	Line Guide Pawl	BNT 0489	Key Washer "A"	BNT 0724	Pre-Set Dial
BNT 0044	(Line Guide) Stabilizer Bar	BNT 0490	Drag Washer	BNT 0725	Pre-Set Nut
BNT 0045	Worm Bearing (B)	BNT 0496	Drive Shaft Washer "C"	BNT 0726	Pre-Set Spring
BNT 0060	Spacer (Optional)	BNT 0534	Right Side Platecover	BNT 0727	Strike
BNT 0133	Worm Shaft Retainer	BNT 0535	Anti-Reverse Switch	BNT 0728	Pre-Set Washer
BNT 0184	Magnet Retainer Lock	BNT 0537	Clutch Button Attachment	BNT 0729	Strike Spring
BNT 0188	O Ring	BNT 0538	Retractor Guide	BNT 0730	Strike Ball
BNT 0194	Ball Bearing	BNT 0539	Drive Gear	BNT 0731	Star Drag
BNT 0244	Bushing (B)	BNT 0540	Drive Shaft Washer "B"	BNT 0732	Drive Shaft Cam
BNT 0277	Spacer (B)	BNT 0541	Key Washer "B"	BNT 0747	Drive Shaft Retainer
BNT 0281	Handle Nut	BNT 0542	Anti-Reverse Ratchet	BNT 0748	Drive Shaft Washer "A"
BNT 0285	Set Plate Screw	BNT 0543	Idle Gear	BNT 0749	Handle Assembly
BNT 0291	Side Plate Screw	BNT 0544	Pinion Gear	BNT 0750	Right Side Plate
BNT 0292	Stabilizer Bar Screw (B)	BNT 0545	Anti-Reverse Pawl	BNT 0751	Drive Shaft
BNT 0335	Bearing Washer (A)	BNT 0548	Worm Shaft	BNT 0752	Set Plate Assembly
BNT 0340	Switch Spring	BNT 0550	Left Side Plate	BNT 0753	Spool
BNT 0341	Switch Spring Lock	BNT 0660	Spring Spacer	BNT 0754	Frame
BNT 0352	(Pinion) Yoke	BNT 0661	Magnet Retainer Spring		
BNT 0354	Retractor Spring				