


1989 Model

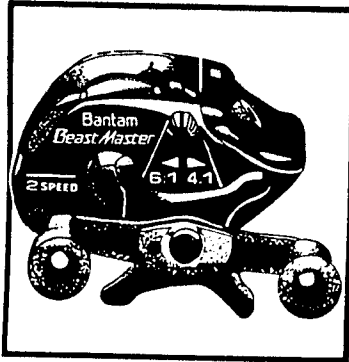

**EXPLODED PARTS VIEW**  
**Bantam *Beast Master* III**

### PARTS LIST

**PART # DESCRIPTION**

- BNT 0031 Spool Shaft Bearing
- BNT 0042 Line Guide Pawl
- BNT 0133 Worm Shaft Retainer
- BNT 0151 Pawl Cap
- BNT 0194 Ball Bearing
- BNT 0251 Retractor Spring
- BNT 0277 Spacer (B)
- BNT 0291 Side Plate Screw
- BNT 0357 Line Guide Assembly
- BNT 0425 Clutchbutton Lock
- BNT 0586 Bolt Retainer
- BNT 0605 Yoke
- BNT 0609 Drive Shaft Retainer Screw
- BNT 0612 Anti-Reverse Pawl Pin
- BNT 0613 Anti-Reverse Pawl
- BNT 0615 Bearing Retainer
- BNT 0620 Stabilizer Bar
- BNT 0661 Magnet Retainer Spring
- BNT 0706 Magnet Retainer
- BNT 0766 Dial Friction Washer
- BNT 0780 Magnet Retainer Lock
- BNT 0795 Handle Nut Plate Screw
- BNT 0796 Handle Nut Plate
- BNT 0797 Handle Nut
- BNT 0799 Friction Washer
- BNT 0802 Spool Tension Spacer (B)
- BNT 0916 Drive Shaft Washer

**PART # DESCRIPTION**

- BNT 0830 Spacer (Optional)
- BNT 0834 Level Wind Guard
- BNT 0835 Spool Shaft Bushing (B)
- BNT 0838 Magnetic Control Dial
- BNT 0904 Handle Assembly
- BNT 0905 Star Drag
- BNT 0906 Coned Disc Spring
- BNT 0907 Key Washer (A)
- BNT 0908 Drag Washer (D)
- BNT 0909 Key Washer (C)
- BNT 0910 Shift Lever
- BNT 0911 Shift Cam
- BNT 0912 Side Plate Bolt (A)
- BNT 0913 Side Plate Bolt (B)
- BNT 0914 Cast Control Cap
- BNT 0915 Spool Tension Spacer (A)
- BNT 0917 "O" Ring
- BNT 0919 Shift Spring
- BNT 0920 Shift Spring Guide (B)
- BNT 0921 Shift Spring Guide (A)
- BNT 0922 Shift Spring Guide Collar
- BNT 0923 Anti-Reverse Switch
- BNT 0924 Drag Shaft (B)
- BNT 0925 Shift Arm
- BNT 0926 Drive Shaft Bearing (B)
- BNT 0927 Drive Gear Washer

**PART # DESCRIPTION**

- BNT 0928 Drive Gear (L)
- BNT 0929 Shift Clutch (L)
- BNT 0930 Shift Sleeve
- BNT 0931 Drive Gear Spacer
- BNT 0932 Shift Clutch (H)
- BNT 0933 Drive Gear (H)
- BNT 0934 Drag Shaft (A)
- BNT 0935 Drag Washer (A)
- BNT 0936 Anti-Reverse Ratchet
- BNT 0937 Idle Gear
- BNT 0938 Drive Shaft
- BNT 0940 Drive Shaft Retainer
- BNT 0941 Worm Shaft
- BNT 0942 Worm Bearing
- BNT 0944 Yoke Plate Support Collar
- BNT 0945 Pinion Gear
- BNT 0946 Retractor Spring Pin
- BNT 0947 One-Piece Frame
- BNT 0948 Clutch Button
- BNT 0949 Spool
- BNT 0950 Dial Case
- BNT 0952 Spool Shaft Bushing (A1)
- BNT 0953 Right Side Plate
- BNT 0954 Thumb Rest
- BNT 0955 Left Side Plate
- BNT 0993 Yoke Spring

Prices and specifications subject to change without notice.

OCTOBER, 1988