



# SHIMANO

## 1989 REPAIR MANUAL

Shimano American Corporation, One Shimano Dr.  
Irvine, CA 92718

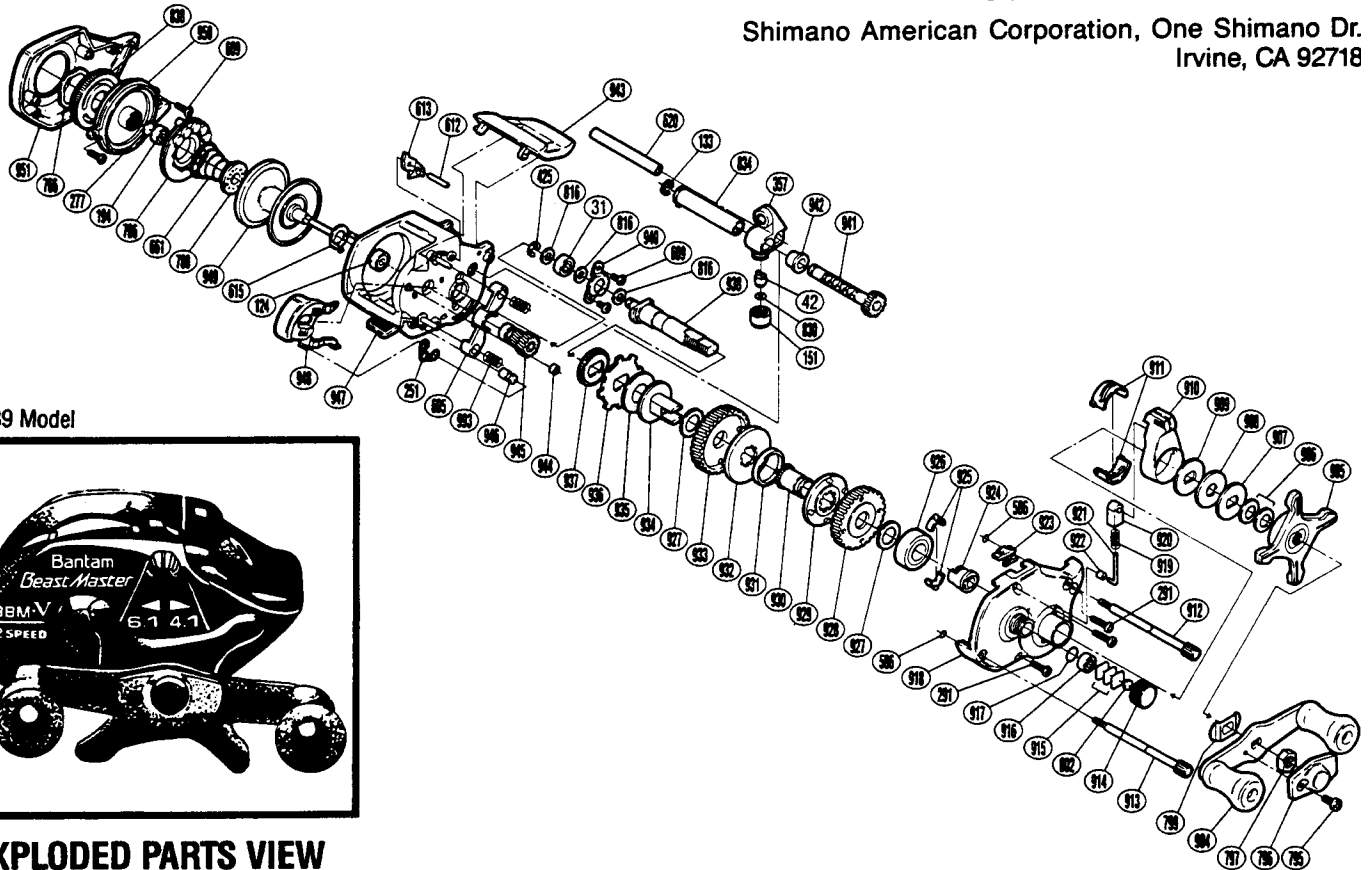

1989 Model

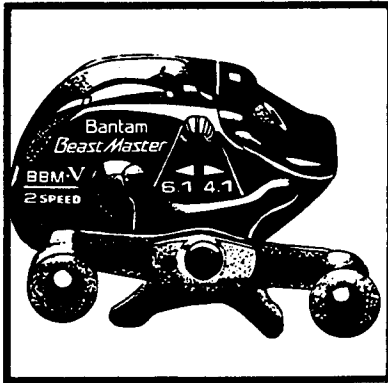

### EXPLODED PARTS VIEW Bantam *Beast Master V*

### PARTS LIST

#### PART # DESCRIPTION

BNT 0031	Spool Shaft Bearing
BNT 0042	Line Guide Pawl
BNT 0124	Spool Shaft Bearing
BNT 0133	Worm Shaft Retainer
BNT 0151	Pawl Cap
BNT 0194	Ball Bearing
BNT 0251	Retractor Spring
BNT 0277	Spacer (B)
BNT 0291	Side Plate Screw
BNT 0357	Line Guide (Assembly)
BNT 0425	Clutchbutton Lock
BNT 0586	Bolt Retainer
BNT 0605	Yoke
BNT 0609	Drive Shaft Retainer Screw
BNT 0612	Anti-Reverse Pawl Pin
BNT 0613	Anti-Reverse Pawl
BNT 0615	Bearing Retainer
BNT 0620	Stabilizer Bar
BNT 0661	Magnet Retainer Spring
BNT 0706	Magnet Retainer
BNT 0766	Dial Friction Washer
BNT 0780	Magnet Retainer Lock
BNT 0795	Handle Nut Plate Screw
BNT 0796	Handle Nut Plate
BNT 0797	Handle Nut
BNT 0799	Friction Washer
BNT 0802	Spool Tension Spacer (B)

#### PART # DESCRIPTION

BNT 0816	Drive Shaft Washer
BNT 0830	Spacer (Optional)
BNT 0834	Level Wind Guard
BNT 0838	Magnetic Control Dial
BNT 0904	Handle Assembly
BNT 0905	Star Drag
BNT 0906	Coned Disc Spring
BNT 0907	Key Washer (A)
BNT 0908	Drag Washer (D)
BNT 0909	Key Washer (C)
BNT 0910	Shift Lever
BNT 0911	Shift Cam
BNT 0912	Side Plate Bolt (A)
BNT 0913	Side Plate Bolt (B)
BNT 0914	Cast Control Cap
BNT 0915	Spool Tension Spacer (A)
BNT 0916	Spool Shaft Bearing (A1)
BNT 0917	"O" Ring
BNT 0918	Right Side Plate
BNT 0919	Shift Spring
BNT 0920	Shift Spring Guide (B)
BNT 0921	Shift Spring Guide (A)
BNT 0922	Shift Spring Guide Collar
BNT 0923	Anti-Reverse Switch
BNT 0924	Drag Shaft (B)
BNT 0925	Shift Arm

#### PART # DESCRIPTION

BNT 0926	Drive Shaft Bearing (B)
BNT 0927	Drive Gear Washer
BNT 0928	Drive Gear (L)
BNT 0929	Shift Clutch (L)
BNT 0930	Shift Sleeve
BNT 0931	Drive Gear Spacer
BNT 0932	Shift Clutch (H)
BNT 0933	Drive Gear (H)
BNT 0934	Drag Shaft (A)
BNT 0935	Drag Washer (A)
BNT 0936	Anti-Reverse Ratchet
BNT 0937	Idle Gear
BNT 0938	Drive Shaft
BNT 0940	Drive Shaft Retainer
BNT 0941	Worm Shaft
BNT 0942	Worm Bearing
BNT 0943	Thumb Rest
BNT 0944	Yoke Plate Support Collar
BNT 0945	Pinion Gear
BNT 0946	Retractor Spring Pin
BNT 0947	One-Piece Frame
BNT 0948	Clutch Button
BNT 0949	Spool
BNT 0950	Dial Case
BNT 0951	Left Side Plate
BNT 0993	Yoke Spring