

CALCUTTA™
Baitcasting Reel


Pure Basics

- One Piece Die-cast Aluminum Frame
- Shimano Variable Brake System
- Super Stopper Anti-reverse
- 3 Stainless Steel Ball Bearings
- 5:1 Gear Ratio

CALCUTTA 200A

EXPLODED PARTS VIEW

MODEL NO.	LINE / CAPACITY	GEAR RATIO	WT. (OZ.)	BEARINGS
CT-200A	8/230, 10/210, 14/120	5.0:1	9.7	2 ball, 1 roller

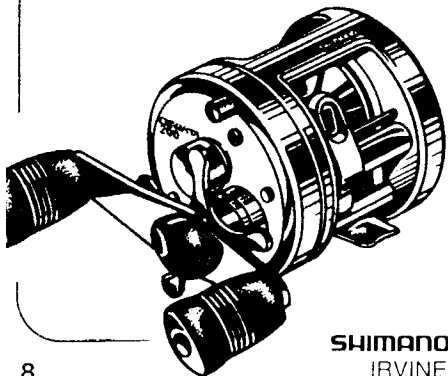

Durable, simple, precise and nothing else. The Calcutta™ is for aggressive anglers who demand the most out of their tackle.

Durable - Calcutta's one-piece die cast aluminum frame provides strength without excess weight. Pinion gear, clutch cam, and yoke will faithfully handle the pressure of even the most rigorous tournament fishing.

Simple - Pure mechanical simplicity is achieved with the Shimano Variable Break system™. Casting functions are simplified with the flush mounted, QuickFire II® clutch bar. It naturally positions your thumb on the spool at all times.

Precise - A feeling of incomparable smoothness and pure precision is the result of Calcutta's aluminum componentry and three carefully placed bearings (2 ball & 1 roller). Control is maximized and handle play is completely eliminated by the Super Stopper™ anti-reverse. Drag smoothness and reliability is enhanced by the use of molybdenum, which provides a low friction surface allowing the drag to start smoothly, and a titanium/cotton material which widens the drag pressure range.

PART #	DESCRIPTION	"A" INTERCHANGEABILITY	"B" INTERCHANGEABILITY
BNT0015	Drag Spring Washer		
BNT0032	Bearing Retainer	BB 0048,BNT0083	
BNT0042	Line Guide Pawl		
BNT0049	Left Side Plate Screw	RD 3386	BR 0519,RD 1480
BNT0060	Spacer (optional)	TGT0048,TRN0087	
BNT0191	Right Side Plate Screw	BB 0061,KXB0052,MLX0048, RD 0050,X/Z0147	BNT0291,BR 0048,RD 0345
BNT0194	Ball Bearing	BNT0084,TGT0184	
BNT0351	Yokde Spring		
BNT0425	"E" Lock	BB 0037,BNT0234,BR 0326,RD 1873, TGT0042,TLD0137,TRN0091,TT 0066	BR 0117,RD 0476
BNT0664	Spacer (B)		
BNT0686	Idle Gear (B) Retainer	BB 0052,BR 0481,RD 2404,TGT0082, TLD0018,TRN0043,TRN0090,TT 0066	
BNT0799	Friction Washer		
BNT1201	Retractor Spring Collar		
BNT1206	Roller Clutch Inner Tube		
BNT1207	Roller Clutch Bearing		
BNT1210	Right Side Plate		
BNT1211	Key Washer		
BNT1212	Drag Washer (C)		
BNT1213	Drive Gear		
BNT1214	Drag Washer (A)		
BNT1215	Anti-Reverse Ratchet		
BNT1218	Idle Gear (A) Spacer		
BNT1221	Set Plate		
BNT1223	Retractor Spring		
BNT1225	Pinion Gear		
BNT1227	Clutch Pawl Spring Retainer	TLD0027,TT 0188	
BNT1229	Drive Shaft Bushing	TGT0031	
BNT1230	Drive Shaft Spacer	TGT0032	
BNT1233	Clutch Plate		
BNT1234	Level Wind Guide		
BNT1237	Worm Bearing (A) Retainer Screw		
BNT1238	Worm Bearing (A) Retainer		
BNT1239	Pawl Cap		BNT1092,TGT0227
BNT1240	Line Guide		
BNT1241	Level Wind Guard		
BNT1245	Clutch Bar Support Spacer		
BNT1250	Left Side Plate		
BNT1289	Star Drag Spacer		
BNT1292	Star Drag		
BNT1293	Retractor Spring Pin		
BNT1296	Handle Assembly		
BNT1297	Cast Control Cap Assembly		
BNT1298	Right Side Plate Bolts Assembly		
BNT1299	Drive Shaft		
BNT1300	Idle Gear (A)		
BNT1301	Idle Gear (B)		
BNT1302	Clutch Cam Screw		
BNT1303	Clutch Cam Retainer		
BNT1304	Clutch Cam		
BNT1305	Yoke		
BNT1306	Clutch Pawl		
BNT1307	Clutch Pawl Spring		
BNT1308	Spool Assembly		
BNT1309	Brake Collar (green)		
BNT1310	Worm Shaft Assembly		
BNT1311	Left Side Plate Screw	TLD0135	
BNT1312	One-Piece Frame		
BNT1313	Clutch Bar Guide (A)		
BNT1314	Clutch Bar Support		
BNT1315	Clutch Bar Guide (B)		
BNT1316	Quick-Fire II Clutch Bar		
BNT1317	Brake Collar (red)		